



CANARM* DRY SOW STALL DROP TUBE 3



ASSEMBLY

LOCATION

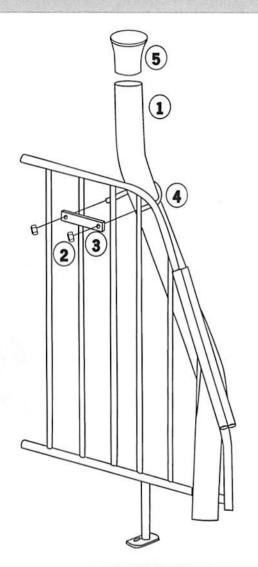

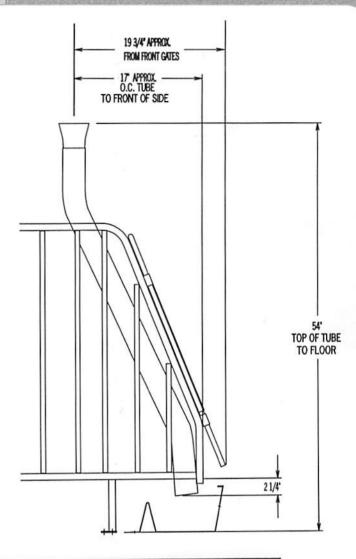

| ILLUS. | DESCRIPTION | PART # | QTY. |
|--------|------------------|---------|------|
| 1 | GALV. DROP TUBE | 2070881 | 1 |
| 2 | 3/8" LOCK NUT | NUT3/8L | 2 |
| 3 | BACKER PLATE | 2070877 | 1 |
| 4 | U-BOLT | 2070878 | 1 |
| 5 | DROP TUBE FUNNEL | 2070876 | 1 |

ASSEMBLY INSTRUCTIONS

- Insert the bottom of the drop tube in the section space from the front.
 Push the drop tube down until it touches the bottom rod.
- 2) Tilt the top of the tube back and clamp with the U-bolt and backer plate.

NOTE: The U-bolt will span the fourth space from the front. Position the U-bolt as close to the top pipe as possible.